

CNC Cable Universal


UNIMIG Razor 45, 80, 120

Hypertherm Powermax Series Machines



**** Important –**

Ensure all remaining non connected spade terminals of the cable are individually insulated with heat shrink or electrical tape.

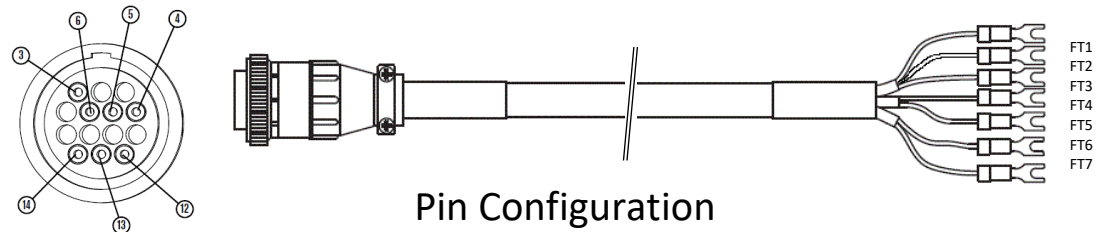

14 Pin Round	Function	Fork Terminal
3	Start	FT1
4	Start	FT2
5	Divided Voltage (-)	FT3
6	Divided Voltage (+)	FT4
12	Transfer	FT5
13	Ground	FT6
14	Transfer	FT7