


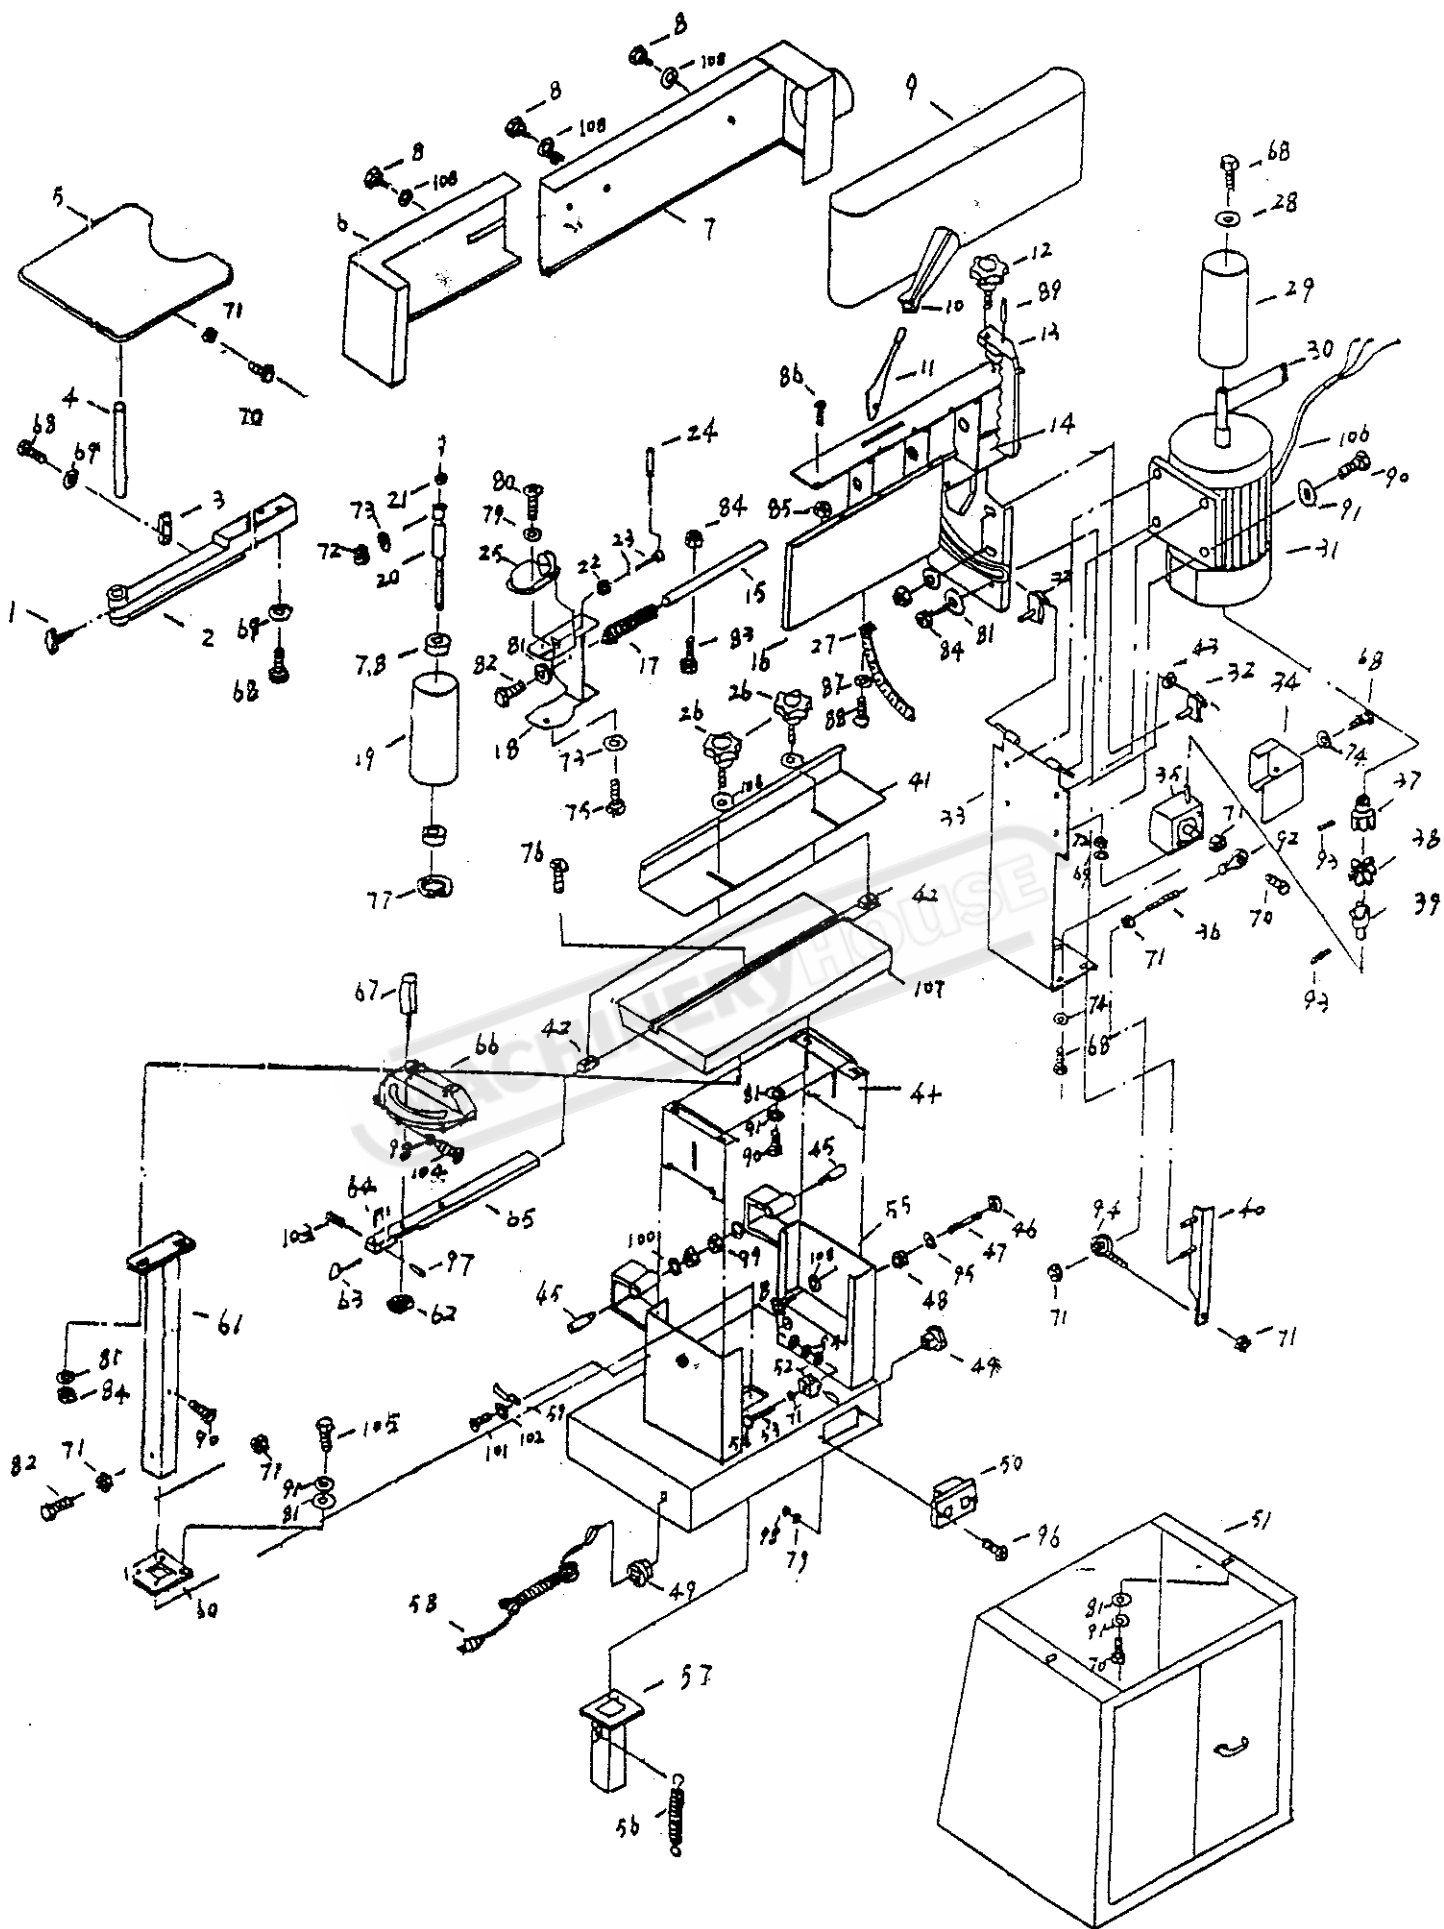

# PARTS LIST

| PART NO. | DESCRIPTION           | QTY | PART NO. | DESCRIPTION        | QTY |
|----------|-----------------------|-----|----------|--------------------|-----|
| 1        | KNOB                  | 1   | 38       | ELASTOMER          | 1   |
| 2        | LOCATING ARM          | 1   | 39       | SHAFT COUPLING     | 1   |
| 3        | LOCATING PLATE        | 1   | 40       | ANGLE IRON FRAME   | 1   |
| 4        | EXTENSION SUPPORT     | 1   | 41       | FENCE              | 1   |
| 5        | EXTENSION PLATFORM    | 1   | 42       | GUIDE BLOCK        | 2   |
| 6        | SECONDARY BELT COVER  | 1   | 43       | COPPER WASHER      | 2   |
| 7        | BELT COVER            | 1   | 44       | LIFTING PLATE      | 2   |
| 8        | KNOB                  | 5   | 45       | SCREW              | 2   |
| 9        | SANDING BELT          | 1   | 46       | REGULATING COLLAR  | 1   |
| 10       | SAND CLAMP HANDLE     | 1   | 47       | WORK TABLE BRACKET | 1   |
| 11       | BELT REPLACING PLATE  | 1   | 48       | PARTITION RING     | 1   |
| 12       | KNOB                  | 1   | 49       | CLAMPER            | 1   |
| 13       | BRACKET               | 1   | 50       | SWITCH             | 1   |
| 14       | SANDING BELT PLATFORM | 1   | 51       | STAND              | 1   |
| 15       | TENSION BAR           | 1   | 52       | CAM ECCENTRIC      | 1   |
| 16       | TABLE                 | 1   | 53       | HANDLE             | 1   |
| 17       | SPRING                | 1   | 54       | HAND KNOB          | 1   |
| 18       | ROLLER ARM            | 1   | 55       | BASE               | 1   |
| 19       | DRIVER ROLLER         | 1   | 56       | SPRING             | 2   |
| 20       | SHAFT                 | 1   | 57       | GUIDE SLEEVE       | 1   |
| 21       | GLOBULAR SLEEVE       | 1   | 58       | POWER CORD         | 1   |
| 22       | MICRO-INCHING NUT     | 1   | 59       | WIDTH POINTER      | 1   |
| 23       | MICRO-INCHING SCREW   | 1   | 60       | CONNECTING PLATE   | 1   |
| 24       | DRIVER WRENCH         | 1   | 61       | GUIDE PILLAR       | 1   |
| 25       | MICRO-INCHING BOX     | 1   | 62       | LOCATING BLOCK     | 1   |
| 26       | KNOB                  | 2   | 63       | LOCATING PLATE     | 1   |
| 27       | TILT SCALE            | 1   | 64       | POINTER            | 1   |
| 28       | WASHER                | 1   | 65       | GUIDE BAR          | 1   |
| 29       | MOTOR ROLLER          | 1   | 66       | MITER GAGE BODY    | 1   |
| 30       | KEY                   | 1   | 67       | HAND KNOB          | 1   |
| 31       | MOTOR                 | 1   | 68       | HEX HEAD SCREW     | 12  |
| 32       | REVOLVE AXLE          | 1   | 69       | GEAR WASHER        | 9   |
| 33       | MOTOR BASE            | 1   | 70       | HEX HEAD SCREW     | 4   |
| 34       | PROTECTION COVER      | 1   | 71       | NUT                | 1   |
| 35       | GEAR CASE             | 1   | 72       | NUT                | 5   |
| 36       | SCREW M8X65           | 1   | 73       | FLAT WASHER        | 2   |
| 37       | SHAFT COUPLING        | 1   | 74       | WASHER             | 6   |

# PARTS LIST

| PART NO. | DESCRIPTION           | QTY | PART NO. | DESCRIPTION           | QTY |
|----------|-----------------------|-----|----------|-----------------------|-----|
| 75       | HEX HEAD SCREW        |     | 93       | SOCKET HEAD SET SCREW | 2   |
| 76       | SOCKET HEAD SET SCREW |     | 94       | BEARING               | 1   |
| 77       | SPRING RING           | 1   | 95       | WASHER                | 4   |
| 78       | BEARING               | 2   | 96       | PAN HD. SCREW         | 2   |
| 79       | GEAR WASHER           | 6   | 97       | SPRING ROLL PIN       | 1   |
| 80       | PAN HD. SCREW         | 4   | 98       | NUT                   | 2   |
| 81       | WASHER                | 13  | 99       | NUT                   | 2   |
| 82       | HEX HEAD SCREW        | 3   | 100      | SPRING WASHER         | 2   |
| 83       | HEX HEAD SCREW        | 1   | 101      | PAN HD. SCREW         | 1   |
| 84       | NUT                   | 9   | 102      | GEAR WASHER           | 1   |
| 85       | NUT                   | 1   | 103      | SOCKET HEAD SET SCREW | 1   |
| 86       | SECANT SET SCREW      | 8   | 104      | PAN HD. SCREW         | 1   |
| 87       | GEAR WASHER           | 1   | 105      | SOCKET HEAD SET SCREW | 4   |
| 88       | PAN HD. SCREW         | 1   | 106      | SWITCH CORD           | 1   |
| 89       | SPRING ROLL PIN       | 1   | 107      | TABLE                 | 1   |
| 90       | HEX HEAD SCREW        | 5   | 108      | WASHER                | 7   |
| 91       | GEAR WASHER           | 6   |          |                       |     |
| 92       | BEARING               | 1   |          |                       |     |