

10 MACHINE COMPONENTS

10.1 - List of spare parts

REFERENCE NO.	DESCRIPTION	REFERENCE NO.	DESCRIPTION
1	Machine bed	48	Blade shaft flange
2	Revolving arm	49	Screw M12
3	Revolving arm locking pin	50	fixed guard
4	Revolving arm locking bush	51	Grain M16
5	Revolving arm locking lever	52	Coolant tube
6	Screw M8	53	Mobile guard
7	Pin Ø6	54	Ring seeger Ø 60 E
8	Counterservice	55	Screw M6
9	Grain M6	56	Screw
10	Bar stop rod	57	Mobile guard rod
11	Bar stop	58	Ring seeger Ø 10 E
12	Vice	59	Tie rod support pin
13		60	Tie rod support
14	Screw	61	Pin Ø4
15	Washer	62	Screw M8
16	Screw	63	Worm wheel
17	Oiler Ø5	64	Grain M8
18	Vice handwheel	65	worm wheel retaining washer
19	Pin Ø6	66	Screw M12
20	Vice thread	67	Ring nut M17
21		68	Ring
22	Screw	69	
23	Burr-free plate	70	
24		71	
25		72	
26		73	
27		74	
28		75	
29	Coolant box	76	
30	Coolant tap	77	
31	Coolant tube	78	
32	Screw M6	79	Head return spring
33	Tank filter	80	
34	Screw M8	82	Motor head
35	Nut M8	83	
36	Hinge pin	84	
37	Grain M6	85	Bearing 609
38	Nut M6	86	Motor
39	Bush	87	Ring seeger
40	Head lever	88	Pump connexion box
41	Nut M16	89	Screw M5
42	Head lever handgrip	90	Coolant pump
43	Ring SM 30-40-7	91	Screw M6
44	Plug	92	Oil level-drain plug
45	Blade shaft	93	Worm screw
46	Blade	94	Head gasket
47	Blade shaft flange stakes		

