


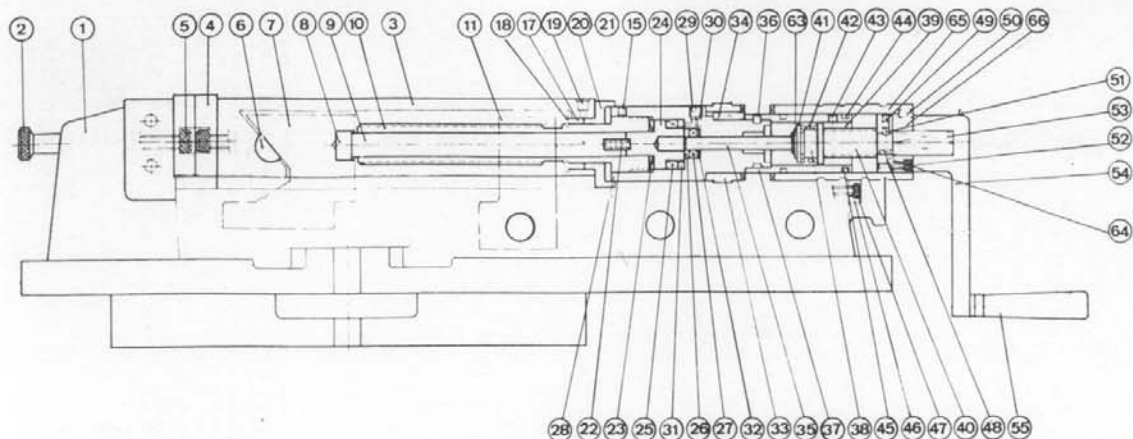


HOW TO ORDER SPARE PARTS

130
 160
 200
 250
 PHV-

-000-000000-00

Qty
 Mfg. No.
 Part No.

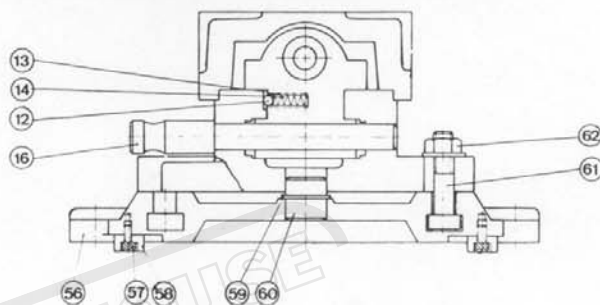

No.	Part No.	Part Name	Qty	Remark	No.	Part No.	Part Name	Qty	Remark
1	130, 160, 200, 250 -001	Main body	1		34	" -034	Key	1	
2	" -002	Shackle	2		35	" -035	Push rod	1	
3	" -003	Movable	1		36	" -036	Set screw	1	
4	" -004	Jaw plates	2		37	" -037	Clutch holder	1	
5	" -005	Socket cap screw	4		38	" -038	Clutch	1	
6	" -006	Semi-sphere segment	1		39	" -039	Clutch	1	
7	" -007	Lock down body	1		40	" -040	Minor screwrod	1	
8	" -008	Power pad	1		41	" -041	Washer	1	
9	" -009	Power shaft	1		42	" -042	Spring	1	
10	" -010	Main screw	1		43	" -043	Set screw	1	
11	" -011	Main screw nut	1		44	" -044	Roll	8	
12	" -012	Steel ball	1		45	" -045	Steel ball	54	
13	" -013	Steel ball holder	1		46	" -046	Stopper	1	
14	" -014	Spring	1		47	" -047	Socket cap screw	2	
15	" -015	Set screw	3		48	" -048	Set screw	2	
16	" -016	Lock pin	1		49	" -049	Set screw	2	
17	" -017	Sleeve	1		50	" -050	Set screw	3	
18	" -018	Pin	4		51	" -051	Set screw	1	
19	" -019	Oil cap	1		52	" -052	Socket cap screw	3	
20	" -020	Main screw rod metal	1		53	" -053	Handle Hex.	1	
21	" -021	Socket cap screw	2		54	" -054	Handle	1	
22	" -022	Spring	1		55	" -055	Handle grip	1	
23	" -023	Disc spring	2		56	" -056	Swivel base	1	
24	" -024	Piston	1		57	" -057	Socket cap screw	2	
25	" -025	Oil packing	1		58	" -058	Key block	2	
26	" -026	Packing ring	1		59	" -059	Sanp ring	1	
27	" -027	Oil packing	1		60	" -060	Swivel base shaft	1	
28	" -028	Cylinder body	1		61	" -061	t-slot bolts	2	
29	" -029	Oil plug	1		62	" -062	Swivel base nut	2	
30	" -030	Oil plug seal	1		63	" -063	Snap ring	1	
31	" -031	Boster ring	1		64	" -064	Minor screwrod collar	1	
32	" -032	Backup ring	1		65	" -065	Collar	1	
33	" -033	Collar	.1		66	" -066	Handle joint	1	