

OPERATION MANUAL

SPARE PARTS SECTION

The following section covers the spare parts diagrams and lists that were current at the time this manual was originally printed. Due to continuous improvements of the machine, changes may be made at any time without notification.

HOW TO ORDER SPARE PARTS

1. Have your machines **model number, serial number & date of manufacture** on hand, these can be found on the specification plate mounted on the machine
2. A scanned copy of your parts list/diagram with required spare part/s identified
3. Go to www.machineryhouse.com.au/contactus and fill out the enquiry form attaching a copy of scanned parts list.

SPARE PARTS LIST

DRAWING NO.	MANF. PART NO.	DESCRIPTION	QTY	PART TYPE	CODE
1	7NG-04D	HEX NUT	12	M4	GB/T6170-2000
2	7SJAD04-12D	PAN HEAD SCREW	5	M4X12	GB/T818-2000
3	7SJAD06-15D	PAN HEAD SCREW	6	M6X15	GB/T818-2000
4	7040-960017	AIR BOX FRONT COVER	1	A3	95922
5	7040-960004	GRIDE PLATE	1	266X140X1	
6	7104-960001	AIR GUIDE	1	A3	95922
7	7NA-06D	HEX NUT	6	M6	GB/T6170-2000
8	7WF-06D	FLAT WASHER	6	Φ6	GB/T96-1985
9	7WS-06B	LOCK WASHER	6	Φ6	GB/T93-1987
10	7SACD04-12D	SOCKET HEAD CAP SCREW	8	M4X12	GB/T70.2-2000
11	7SJAA04-10D	SELF TAPPING SCREW	10	ST4X10	GB/T845-1985
12	7102-960002	AIR BOX	1	A3	95922
13	7036-960001	HANDLE	1	PA6+GF30	
14	7047-960001	HANDLE BRACKET	1	PA6+GF30	
15	7SJAD05-16D	PAN HEAD SCREW	2	M5X16	GB/T818-2000
16	7WF-05D	FLAT WASHER	3	Φ5	GB/T95-1985
17	7WS-05B	LOCK WASHER	3	Φ5	GB/T93-1987
18	7NA-05D	HEX NUT	6	M5	GB/T6170-2000
19	7SJAD05-12D	PAN HEAD SCREW	1	M5X12	GB/T818-2000
20	7WO-05D	TOOTH LOCK WASHER	2	Φ5	GB/T862.1-1987
21	7010-960005	WIRE-2	1	18AWG	355MM
22	7040-960006	GRIDE PLATE	1	251X428	
23	7163-960003	INNER POCKET FILTER	1	421x241x160	
24	7163-960001	ELECTOSTATIC OUTER FILTER	1	421x241x45	
25	7070-960001	RUBBER FOOT	4		
26	7035-960002	REMOTE CONTROL LABEL	1		
27	7040-960001	REMOTE CONTROL TOP COVER	1		
28	7060-960001	BATTERY	2	AA	
29	7017-960001	SPRING	1		
30	7040-960002	REMOTE CONTROL BOTTOM COVER	1		
31	7040-960003	BATTERY COVER	1		
32	7040-960013	REMOTE CONTROL PCB	1		

OPERATION MANUAL

SPARE PARTS LIST

DRAWING NO.	MANF. PART NO.	DESCRIPTION	QTY	PART TYPE	CODE
33	7007-960005	POWER CORD	1	1.8M	0.75MMX3
34	7112-960003	STRAIN RELIEF	1	6P-4	
35	7SJAD05-20D	PAN HEAD SCREW	1	M5X20	GB/T818-2000
36	7031-960004	FUSE HOLDER	1		
37	7031-960004	FUSE HOLDER CAP	1		
38	7111-960002	FUSE	1	UL250V 1A	
39	7035-960032	CONTROL PANEL LABEL	1		
40	7SEAB03-18D	FLAT HEAD TAP SCREW	2	ST3X18	
41	7040-960007	SWITCH BOX COVER	1		
42	7SJAB04-14D	SELF TAPPING SCREW	2	ST4X14	
43	7070-960002	INSULATION WASHER	2	Φ3 #4170	
44	7040-960014	CIRCUIT BOARD	1		
45	7031-960001	SWITCH BOX	1		
46	7010-960004	WIRE-1	1	18AWG	170MM
47	7043-960001	FAN WHEEL	1		
48	7097-960001	FAN HOUSING COVER-L	1		
49	7097-960001	FAN HOUSING COVER-M	1		
50	7SJAD04-10D	PAN HEAD SCREW	10	M4X10	GB/T818-2000
51	7064-960001	RUBBER SPACER	4		
52	7143-960001	LARGE WASHER	4	Φ5	GB/T96-1985
53	7NG-05D	NYLON INSERT LOCK NUT	4	M5	
54	7SFDD05-25D	HEX CAP SCREW	4	M5X25	GB/T5783-2000
55	7097-960001	FAN HOUSING COVER-R	1		
56	7110-960003	MOTOR	1		
57	7008-960002	CAPACITOR	1		3mF±5% 400V
58	7WO-04D	TOOTH LOCK WASHER	1	Φ4	GB/T95-1985
59	7031-960002	CAPACITOR COVER	1		
60	7038-960001	YELLOW TUBE	6		
61	7049-960001	EYE BOLT	4		
62	7ND-06D	FLANGE NUT	4	M6	GB/T6177.1-2000
63	7049-960003	HOOK CHAIN	4		
64	7049-960002	HOOK SCREW	4		
65	7SQAD06-12D	PAN HEAD SCREW	4	M6X12	GB/T818-2000

HAFCO WOODMASTER
OPERATION MANUAL
SPARE PARTS DIAGRAM
