


HAFCO

DELUXE SERIES




Swivel Castors

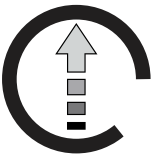

Height Adjustable



Tool Tray Holder

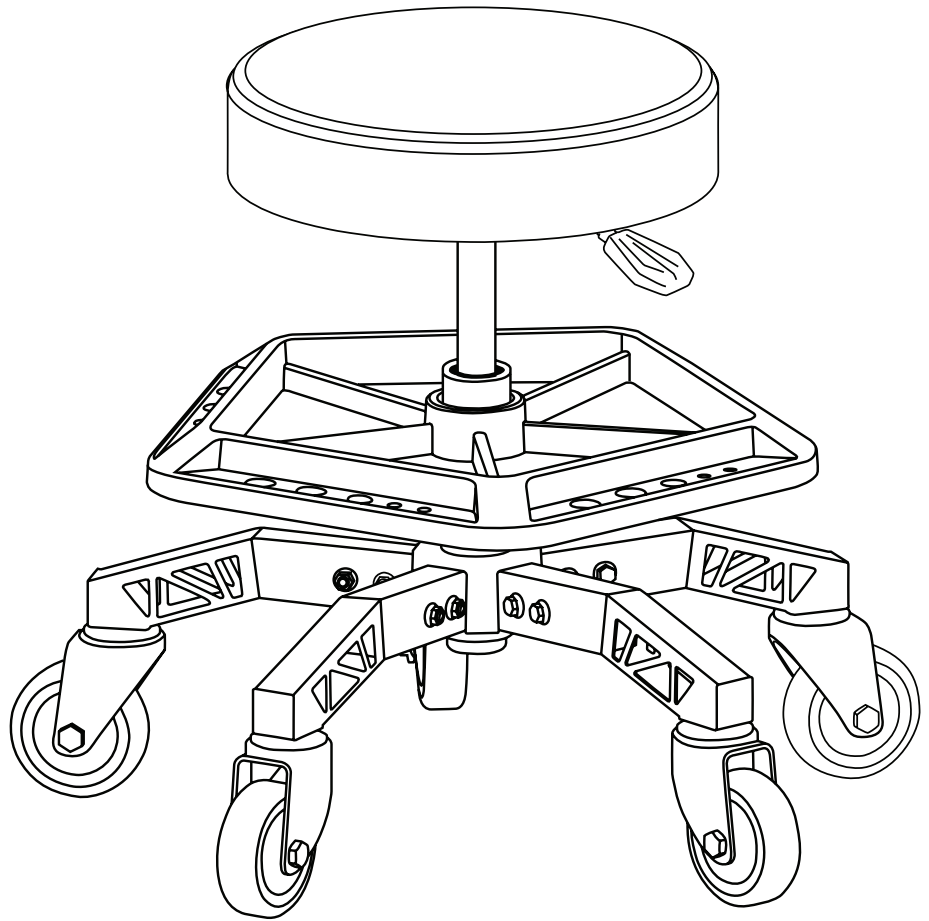


Edition : 2.0
Date: (03/26)


Instruction Manual

Gen 2 MECHANICS ROLLER SEAT DMRS-600B


Order Code: (A361)

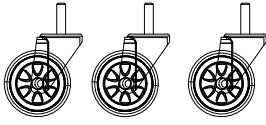


1. Universal Wheel (x 3)

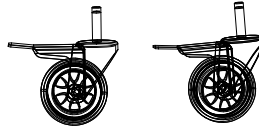


2. Universal Wheel with Brake (x 2)

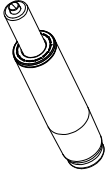


3. Pneumatic Cylinder

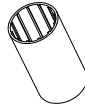


4. Spacer

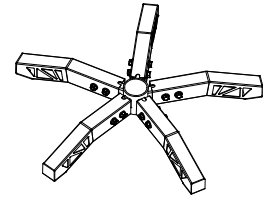


5. Bottom Frame

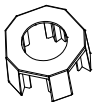


6. Decorative Cover

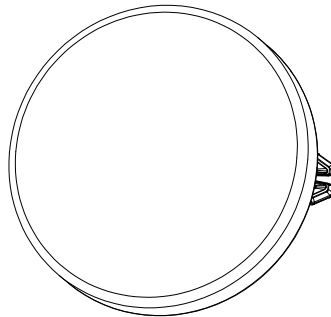

7. Cushion Seat

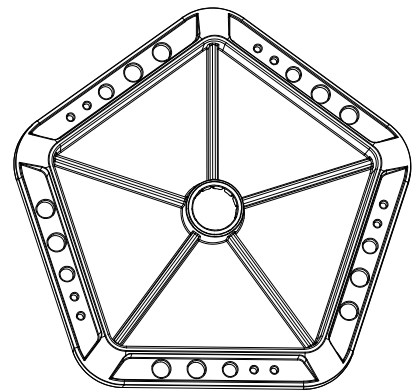

8. Tool Tray

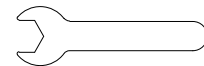


9. Opn Wrench

Part No.	Description	Quantity
1	Universal Wheel	3
2	Universal Wheel with brake	2
3	Pneumatic Cylinder	1
4	Spacer	1
5	Bottom Frame	1
6	Decorative Cover	1
7	Cushion Seat	1
8	Tool Tray	1
9	Open End Wrench	1

STEP 1

Install all universal wheels (1 & 2) by screwing them into the bottom frame threaded holes (5) . Use a wrench to tighten all wheels.



Part No.	Description	Quantity
1	Universal Wheel	3
2	Universal Wheel with brake	2
5	Bottom Frame	1

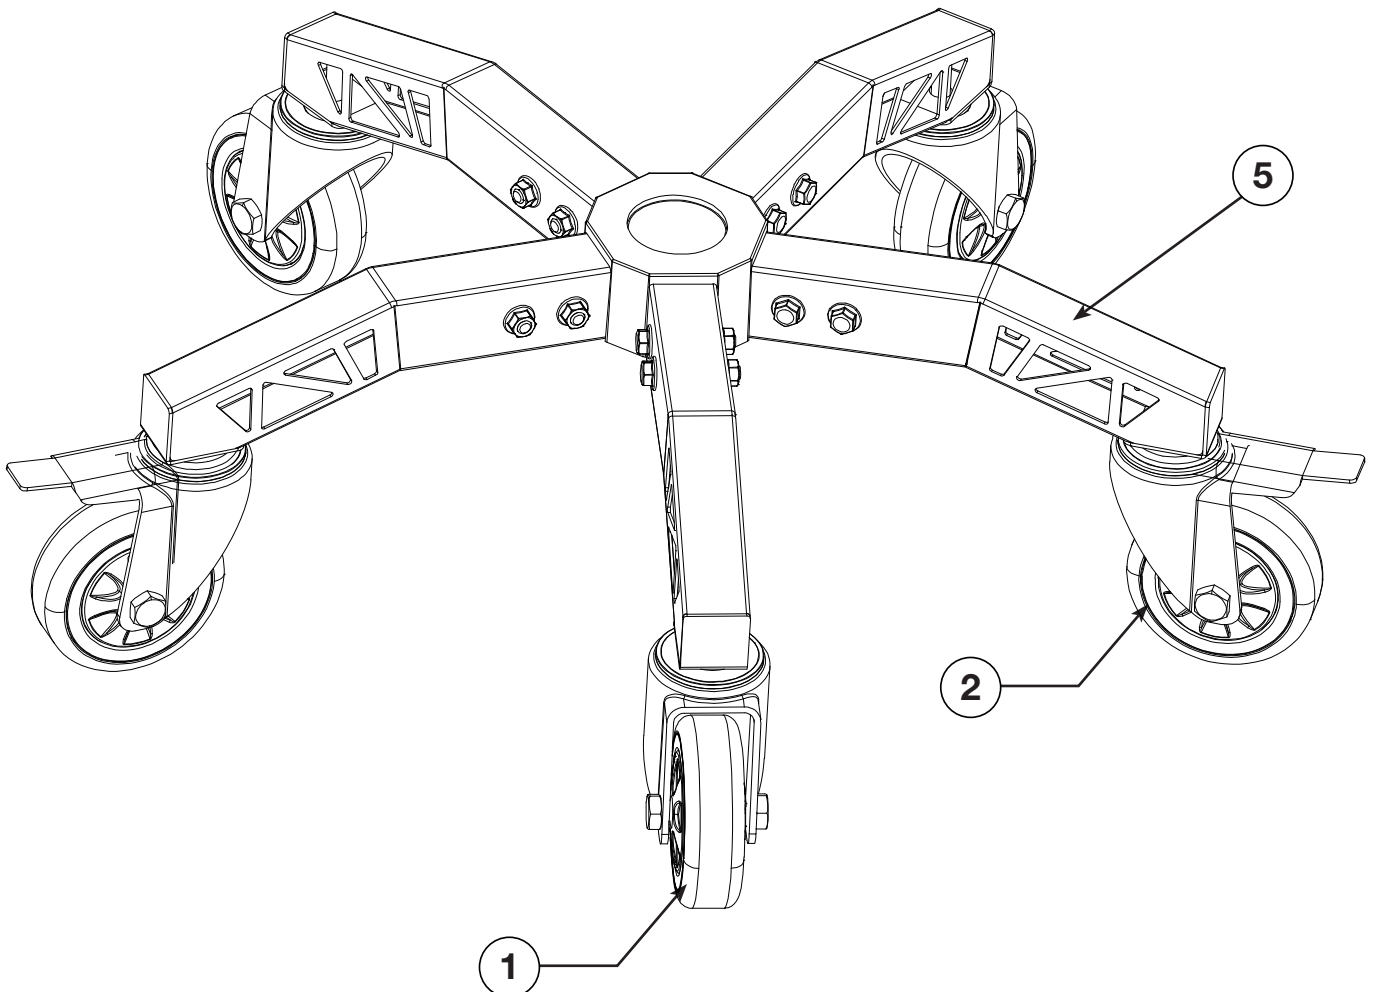

STEP 2

Align the smaller end of the spacer (4) with the tool tray (8) and press on firmly to fit together.


Part No.	Description	Quantity
4	Spacer	1
8	Tool Tray	1

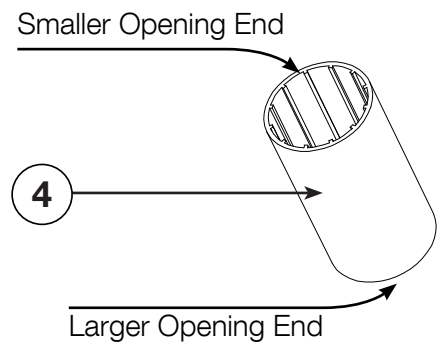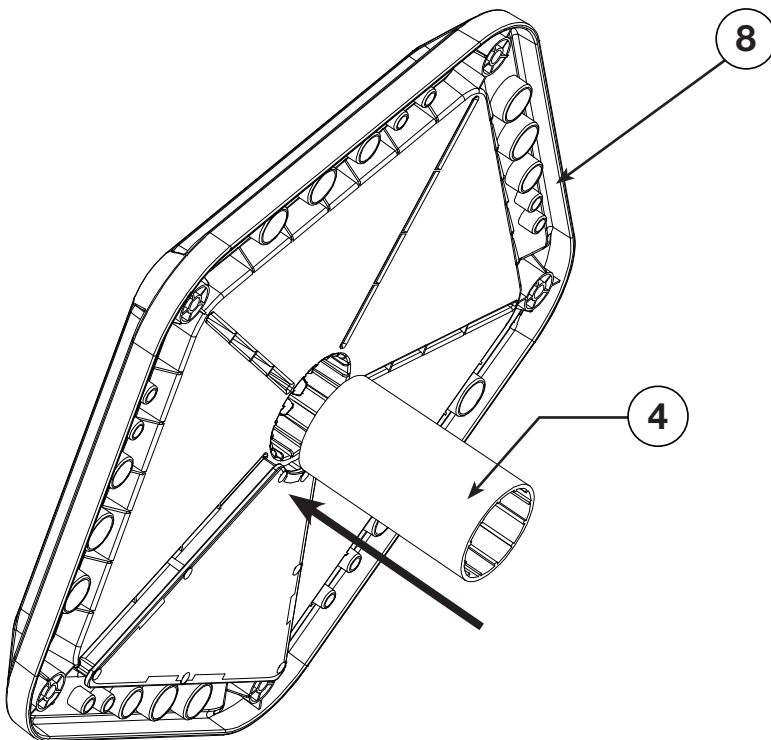

STEP 3

Remove the rubber sleeve on the pneumatic cylinder and then insert the larger end into the top of the tool tray (8).


Part No.	Description	Quantity
3	Pneumatic Cylinder	1

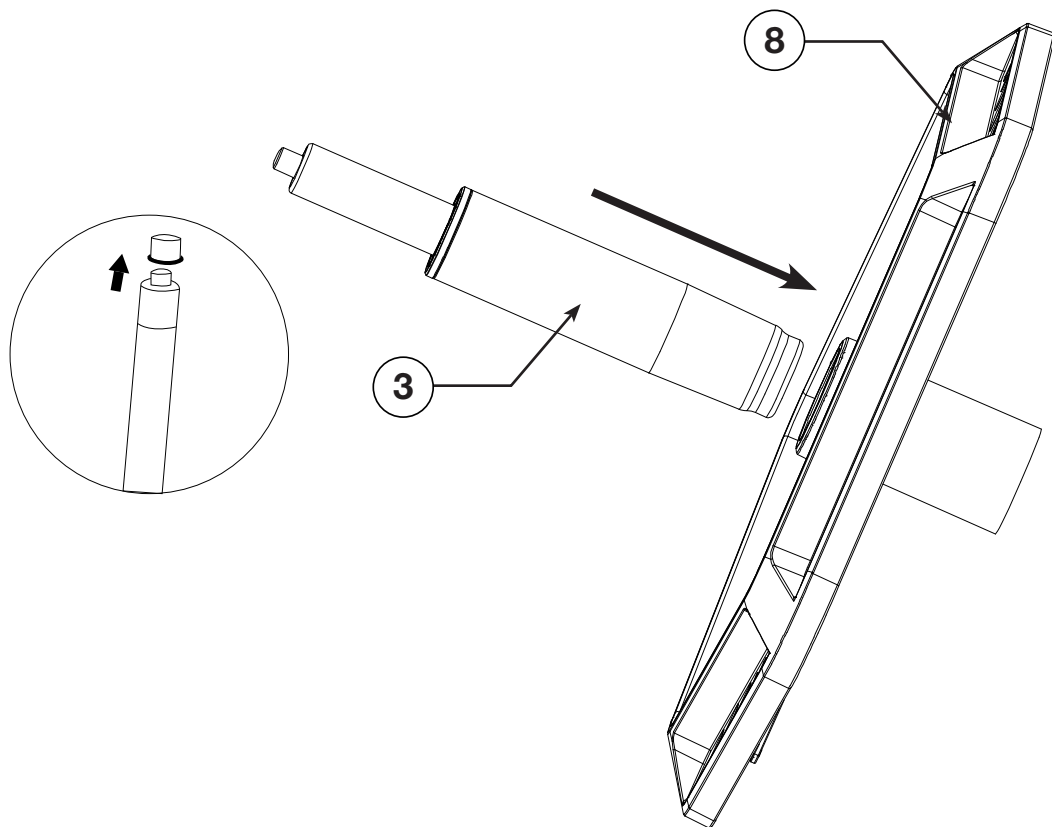

STEP 4

Install the pneumatic cylinder (3) into the bottom frame (5) as shown below.


NOTE: Make sure you press the Tool Tray (8) all the way down to ensure it seats into the bottom of the frame collar.

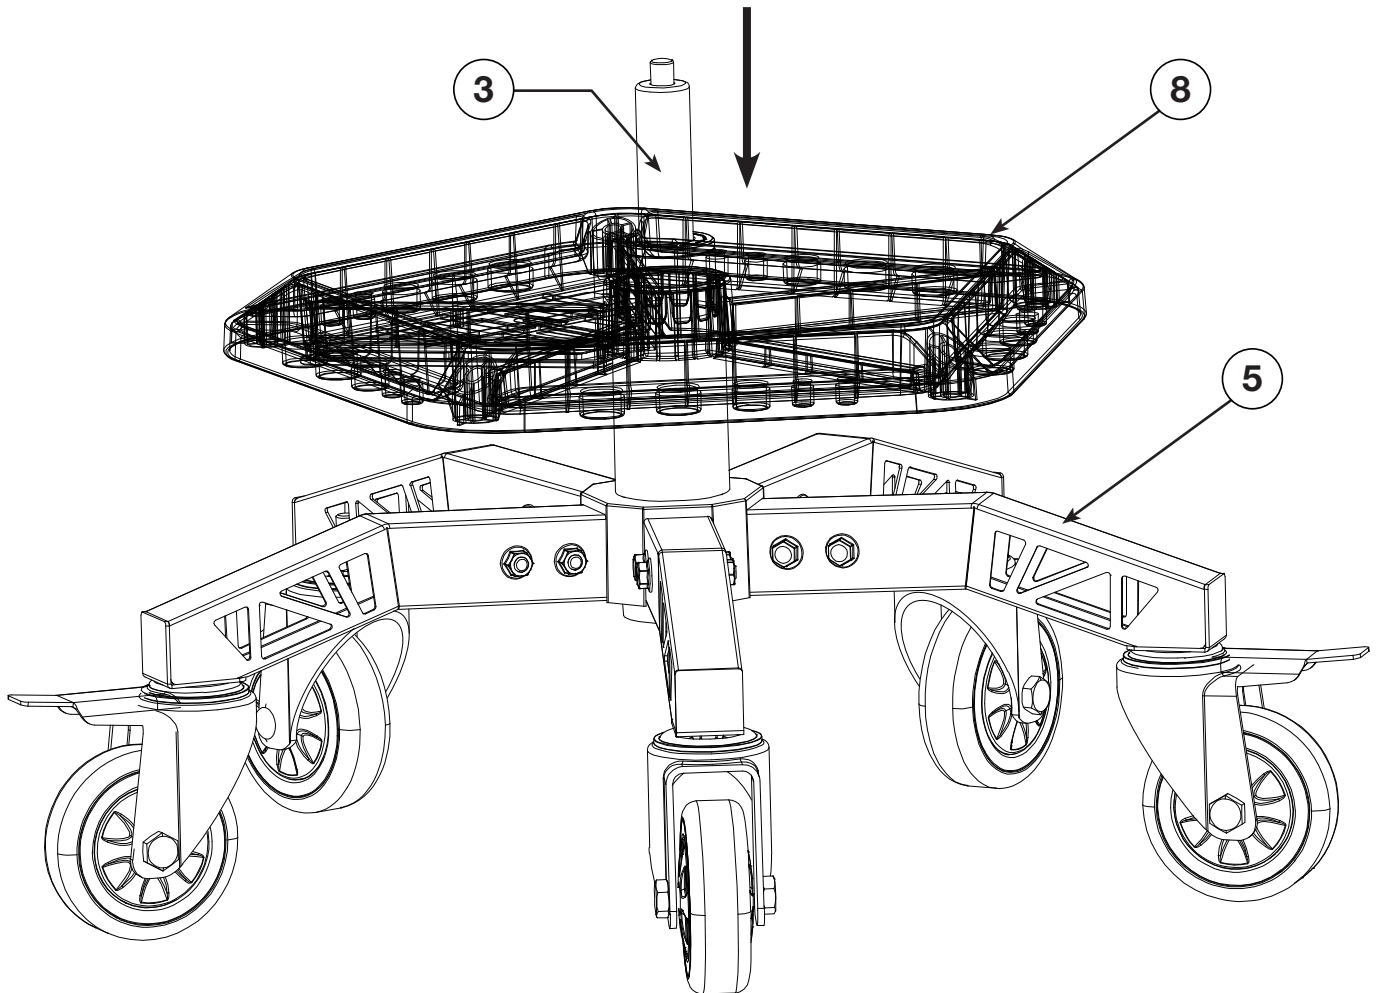

STEP 5

Align the cushion seat (7) with the top rod of the pneumatic cylinder (3) and press into place.

Part No.	Description	Quantity
7	Cushion Seat	1

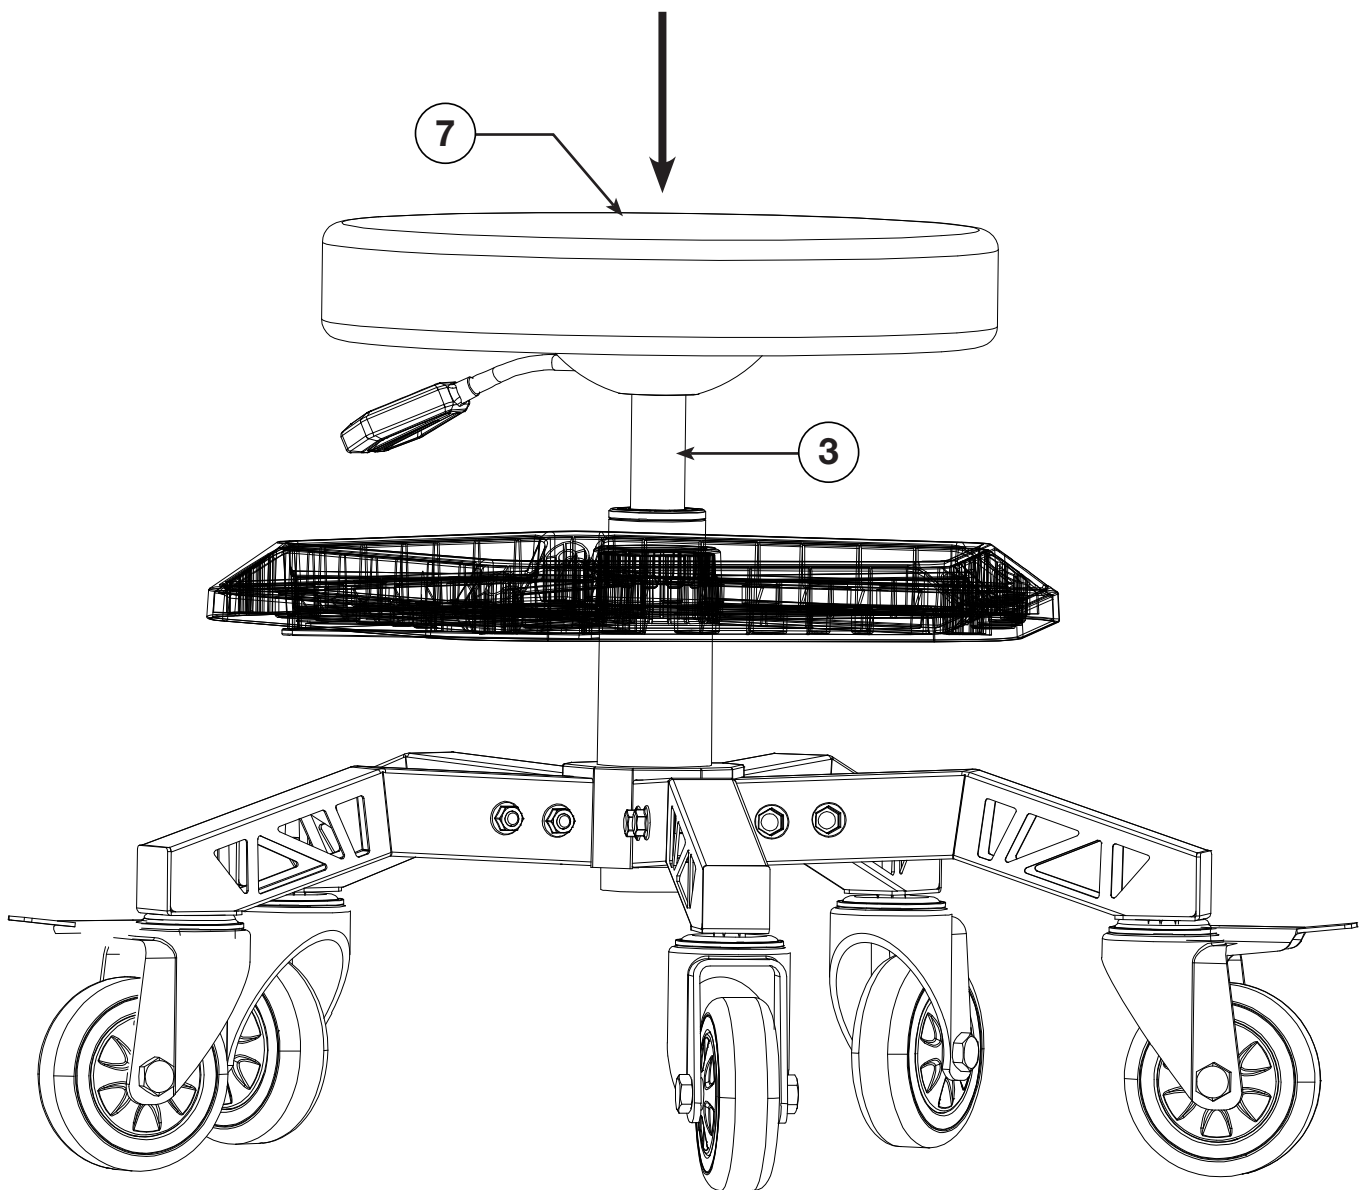

OPTIONAL BRRS-600 Back Rest (A3612)

T/S Mechanics Roller Seat - BRRS-600 (A361)

Make your mechanics roller seat even more comfortable with this optional back rest to suit the generation 2 version of our DMRS-600B roller seat. Easy to install on the steel mounting plate, the back rest features a strong cast aluminium support frame with a deluxe thick padded back rest to increase the comfort level of the seat.

Features


Compatible with Gen – 2 DMRS-600B (A361) mechanics roller seat

Thick padded back rest - 240 x 150 x 60mm

Includes strong cast aluminium support frames & fixing hardware

ORDER CODE	Model	Description
A3612	BRRS-600	Back Rest

Part No.	Description	Quantity
1	Backrest	1
2	Frame	1
3	Phillips Head Screws M8x30mm	8
4	Hex / Phillips Head Tool	1

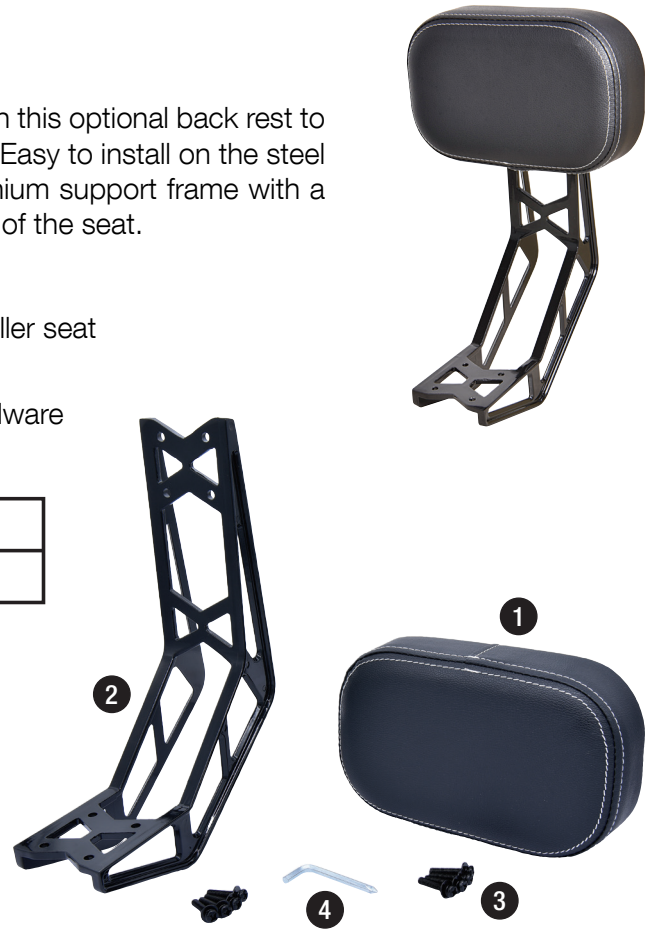

MOUNTING INSTRUCTIONS

STEP 1: Attach the backrest (1) to the frame using 4 × M8 × 30 mm screws (3).

STEP 2: Secure the frame (2) to the seat bracket (A361) using 4 × M8 × 30 mm screws.

STEP 3: Ensure all screws are tightened firmly before use.



Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

DISTRIBUTED BY



www.machineryhouse.com.au

www.machineryhouse.co.nz